


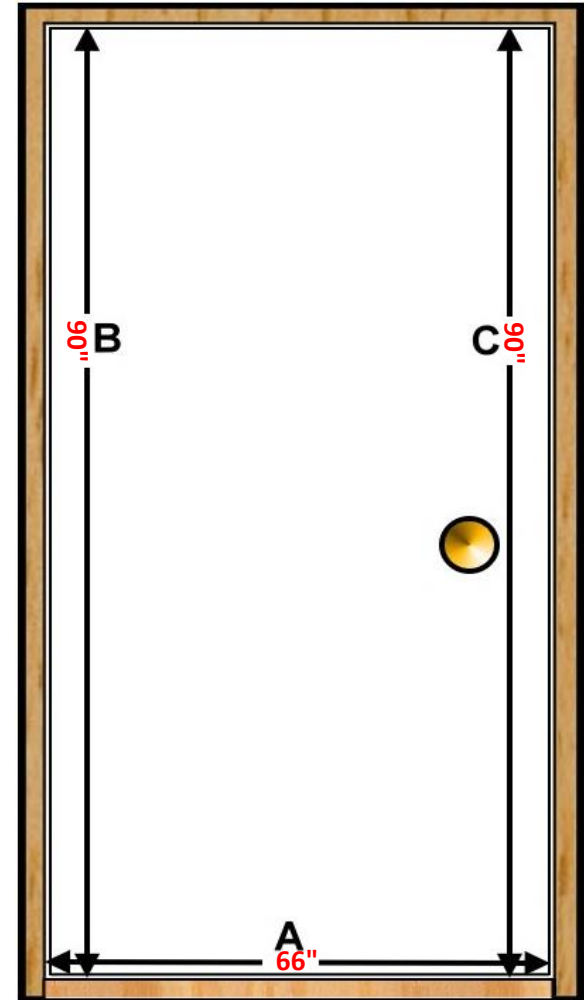

How to Measure for a Door Surround

1. Measure the threshold of the door frame from tip to tip (A) and put that dimension on the form.
2. Measure the left side of the door frame from tip to tip (B) and put that dimension on the form.
3. Measure the right side of the door frame from tip to tip (C) and put that dimension on the form.



Sample Line

Product Part #	Door Frame Measurements	Check All That Apply		Quantity	Type of Door	Type of Siding
DS-9	(A: <u>66"</u>) X (B: <u>90"</u>) (C: <u>90"</u>)	<input checked="" type="checkbox"/> Built-in J-Channel	<input checked="" type="checkbox"/> Vinyl Nailing Flange	1	Thermatru Slider	Vinyl Mastic Quest
		<input checked="" type="checkbox"/> Door Fin Relief	<input type="checkbox"/> Keystone			
		<input checked="" type="checkbox"/> Expansion Gasket	<input type="checkbox"/> Dentil			

